

**DITEL: PRODUCTS: DIGITAL STARS: 7780X** 



#### **DESCRIPTION**

Model 778 panel indicators are specific instruments for readout rotational rates from 0 to 9999 rpm with an input for 60 pulses per revolution.

If desired, the decimal point location may be selected by soldering jumpers located at the rear of the display and accessible after removal of the lens.

The input option allows direct connection to several types of proximity sensors and pulse generators and provides a +10V output to supply the transducers that require external excitation.

Reset is automatically made at the moment of power removal.

Power and signal connections are made via a 6-pin MAT-N-LOK AMP connector located at the rear of the unit.

#### **SELECTION GUIDE**

7780	X	Υ	0	4
INPUT				
Magnetic pickup	1			
NAMUR sensor	2			
TTL/24V pulses	4			
NPN sensor	7			
PNP sensor	8			
SUPPLY POWER				
115V 50/60Hz		1		
230V 50/60Hz		2		
12V DC ISOLATED		4		
24V 50/60Hz		7		
24V DC ISOLATED		8		
SILKSCREENED UNIT				

#### ORDERING EXAMPLE

7780 4204 E63: Tachometer for 60ppr. S700 Power: 230V AC (50/60Hz) Input type: TTL/24V pulses Format 72x36mm Unit: rpm

#### **SPECIFICATIONS**

#### INPUT SIGNAL

• Input type: magnetic pickup, NAMUR, TTL/24V DC pulses, NPN and PNP sensors

• Common mode max. voltage (signal/power)

- AC voltage: 1000V DC or

1500V ACpp

- DC voltage: ± 400V DC

#### **POWER**

Supply voltages

- AC (50/60Hz) : 24, 115, 230V AC

- DC (isolated): 12, 24V DC

Maximum isolation
 1000V DC or 1500V ACpp

• Consumption 4W nominal

#### TRANSDUCERS EXCITATION

Incorporated +10V @ 60mA non stabilized

#### **DISPLAY**

• Type red LED (0.4") 10 mm. high

• Resolution 4 digits (9999)

Decimal point selectable by soldering jumper

#### **ENVIRONMENTAL**

• Operating temperature 0° to 50°C

• Storage temperature -25° to +85°C

• Relative humidity max. 95% (non condensing)


• Weight 300g

• Dimensions 72x36x110mm. (s/DIN 43700)


Panel cutout 68x33mm. (s/DIN 43700)

Case material
 94 V-0 UL-rated polycarbonate

## **DIMENSIONS (mm)**

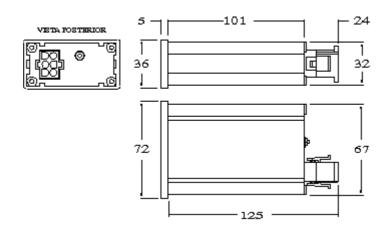


# SIGNAL AND POWER CONNECTION

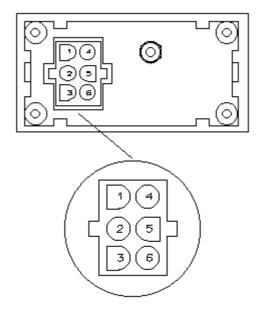

Α	C VERSION
PIN 1	Spare
PIN 2	Input signal (+)
PIN 3	Common
PIN 4	AC HI
PIN 5	Excitation
PIN 6	AC LO (neutral)
D	C VERSION
	C VERSION Spare
PIN 1	
PIN 1 PIN 2	Spare
PIN 1 PIN 2 PIN 3	Spare Input signal (+)
PIN 1 PIN 2 PIN 3 PIN 4	Spare Input signal (+) Common


# **ACCESS TO CONFIGURATIONS**

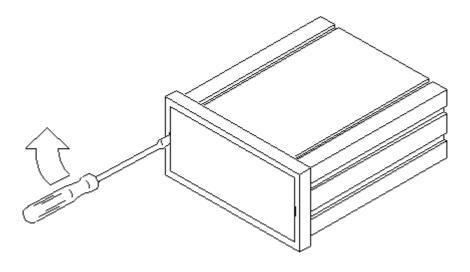

Remove lens by placing an appropriate sized screwdriver in the slot and pushing laterally as it is shown in the figure until the lips disengange.

To reinstall lens, insert it completely from one side and press from the other until it is perfectly fitted.


#### **MOUNTING**

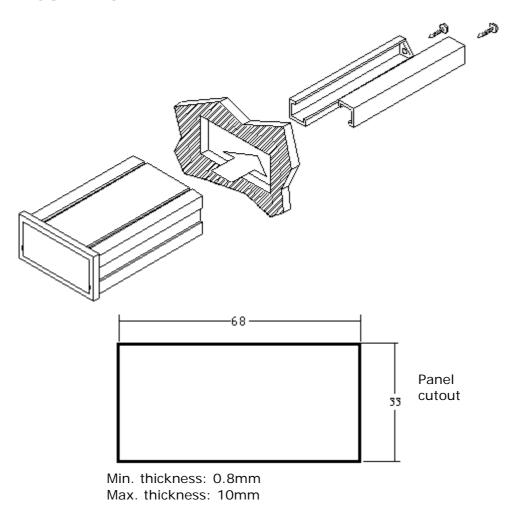


**SENSOR CONNECTION** 

Magnetic pickup
PIN 3 = GND
PIN 2 = SIGNAL


NAMUR sensor
PIN 5 = +8V
PIN 2 = SIGNAL

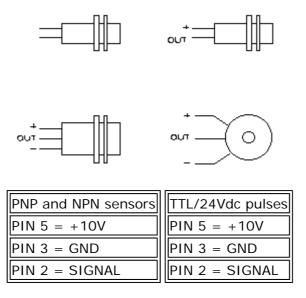

## **DECIMAL POINT**

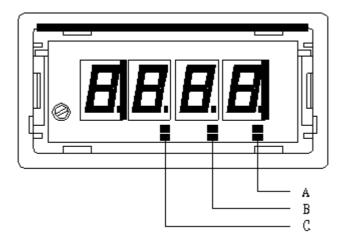

To change the decimal point location, remove the frontal lens and solder the appropriate jumper as indicated here below:

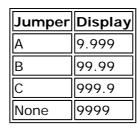

## Warranty:

Press the icon to see it.



Change language | Back to the menu

