

KOS1605TC THERMOCOUPLE DIN RAIL TRANSMITTER

- > THERMOCOUPLE TYPES K J E N T R S L U B C G
- > (4 to 20) mA TWO WIRE OUTPUT
- > USER OUTPUT TRIM (ZERO and SPAN)
- > SIMPLE CONFIGURATION VIA USB PORT
- > FREE CONFIGURATION SOFTWARE


> INTRODUCTION

The KOS1605TC is a DIN rail mounted temperature transmitter from Status Instruments. It has been designed to accept most common thermocouple sensor inputs and provide the user with a standard two wire (4 to 20) mA output signal. Galvanic isolation is provided between input and output and all temperature ranges are linear to temperature.

Designed for ease of use, our latest USB interface is fitted for quick and easy configuration. Just connect a standard USB cable between the KOS1605TC and your PC. Our free configuration software will guide you through any changes you wish to make. To further help save time, the KOS1605TC does not need to be wired to a power supply during the configuration process, it is powered via the USB interface from your PC.



KOS1605TC

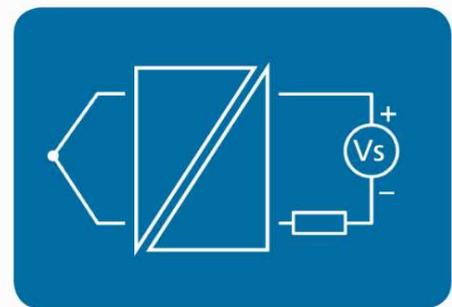

> FEATURE HIGHLIGHTS

ACTIVE RANGE

The KOS1605TC is provided with a user push button ranging option, allowing adjustments at both 4 mA and 20 mA for a live value.

The 'user adjust' function can be locked during configuration if not required. The state LED indicates out of range input during normal operation, during 'user adjust' it is also used to indicate the stage of adjustment.

(4 and 20) mA TRIM

The buttons can also be used for 4 mA and 20 mA current trim adjustment to add small offsets to (4 or 20) mA output.

SENSOR REFERENCING

The KOS1605TC sensor referencing via the Windows based USBSpeedlink software allows for close matching to a known reference sensor, eliminating possible sensor errors.

SENSOR BURN OUT DETECTION

If a sensor wire is broken or becomes disconnected, the KOS1605TC output will automatically go to its user defined level (upscale or downscale) or a pre-set value.

STABILITY

The KOS1605TC DIN rail transmitter incorporates the latest digital technology to ensure accurate low drift performance.

KOS1605TC THERMOCOUPLE DIN RAIL TRANSMITTER

TC SENSOR INPUT		SPECIFICATIONS @20 °C
Type/ Function	Range/ Description	Accuracy/ Stability/ Notes
K	(-200 to 1370) °C	± 0.1% of full input range ± CJ error *1
J	(-100 to 1200) °C	
E	(-200 to 1000) °C	
N	(-180 to 1300) °C	
T	(-200 to 400) °C	± 0.2% of full input range ± CJ error *1
R	(-10 to 1760) °C	± 0.1% of full input range ± CJ error *1 over the range (800 to 1600) °C
S	(-10 to 1760) °C	± 0.1% of full input range ± CJ error *1 over the range (800 to 1600) °C
mV	(-10 to 70) mV	± 0.02 % of full input range
Thermal drift	(-20 to 50)°C	(± 0.15 °C/ °C at zero) + (± 0.1 °C/ °C at span)
	(50 to 70) °C	Typically as above
Any span may be selected; full accuracy is only guaranteed for spans greater 25 °C		
Basic measurement accuracy includes the effects of calibration, linearization and repeatability		
*1 plus any sensor error		

COLD JUNCTION (CJ)		SPECIFICATIONS @20 °C
Type	Range °C	Accuracy/ Stability
Thermistor bead	(-40 to 85)°C	± 0.5 °C
Thermal drift	Zero at 20 °C	± 0.05 °C/ °C

OUTPUT		SPECIFICATIONS @20 °C
Type/ Function	Range/ Description	Accuracy/ Stability/ Notes
Two wire current	(4 to 20) mA	(mA output/2000) or 5 uA (Whichever is the greater)
Thermal drift	Zero at 20 °C	2 uA / °C
Maximum output current	21.5 mA	In high burnout condition
Minimum output current	< 3.9 mA	In low burnout condition
Loop voltage effect		0.2 uA / V
Maximum output load	[(V supply - 10)/20] KΩ	700 Ω @ 24 V DC
Loop supply	(10 to 30) V DC	SELV
Power		< 1 W full power
Thermal stability		± 2 uA/ °C

USB USER INTERFACE		
Type/ Function	Range/ Description	Notes
Configuration hardware		USB A to mini B lead
Configuration software	USBSpeedLink	Download www.ditel.es
Sensor configuration	Sensor type	Thermocouple list
	Temperature range for (4 to 20) mA retransmission	°C or °F Active or manual range
	Sensor offset	±10 °C or ±18 °F
	Burnout current	Upscale, downscale or user set
Pre-set temperature (diagnostics)	Any within sensor range	°C or °F

KOS1605TC THERMOCOUPLE DIN RAIL TRANSMITTER

Pre-set output current (diagnostics)	Any within output range	mA
Tag		20 characters
Button function	Active range	On, off
Read live data	Temperature Output	°C or °F mA
Save/ open configuration	To/ from PC file	

USER PUSH BUTTON INTERFACE	
Function	Description
Active range	Range 4 mA and 20 mA points against live input

GENERAL	
Function	Description
Update time	500 ms
Response time	1 s
Start-up time	8 s
Warm up time	120 s to full accuracy
Default configuration	Type K (0 to 1000) °C, upscale burnout, 0 °C offset, active range buttons
LED (red)	If mA output < -0.1% or > 100.1 % LED ON
Protection	Reverse connection


ENVIRONMENTAL	
Function	Description
Ambient temperature	Operating (-30 to 70) °C Storage (-40 to 85) °C
Ambient Humidity	Operating/Storage (10 to 90) %RH non-condensing
Protection requirement	Device must be installed in an enclosure offering >IP65 Protection
USB configuration ambient	(10 to 30) °C

MECHANICAL	
Function	Description
Dimensions	17.5 mm width, 56.4 mm depth from rail, 90 mm height
Enclosure	DIN rail mount
Material	Polymide 6.6 self-extinguishing: Grey
Connections	Screw terminals 2.5 mm wire maximum
Weight	60 g approximate

APPROVALS	
EMC	BS EN 61326: Note - Sensor input wires to be less than 30 m to comply
Ingress protection	BS EN 60529
RoHS	Directive 2011/65/EU

KOS1605TC THERMOCOUPLE DIN RAIL TRANSMITTER

Mechanical

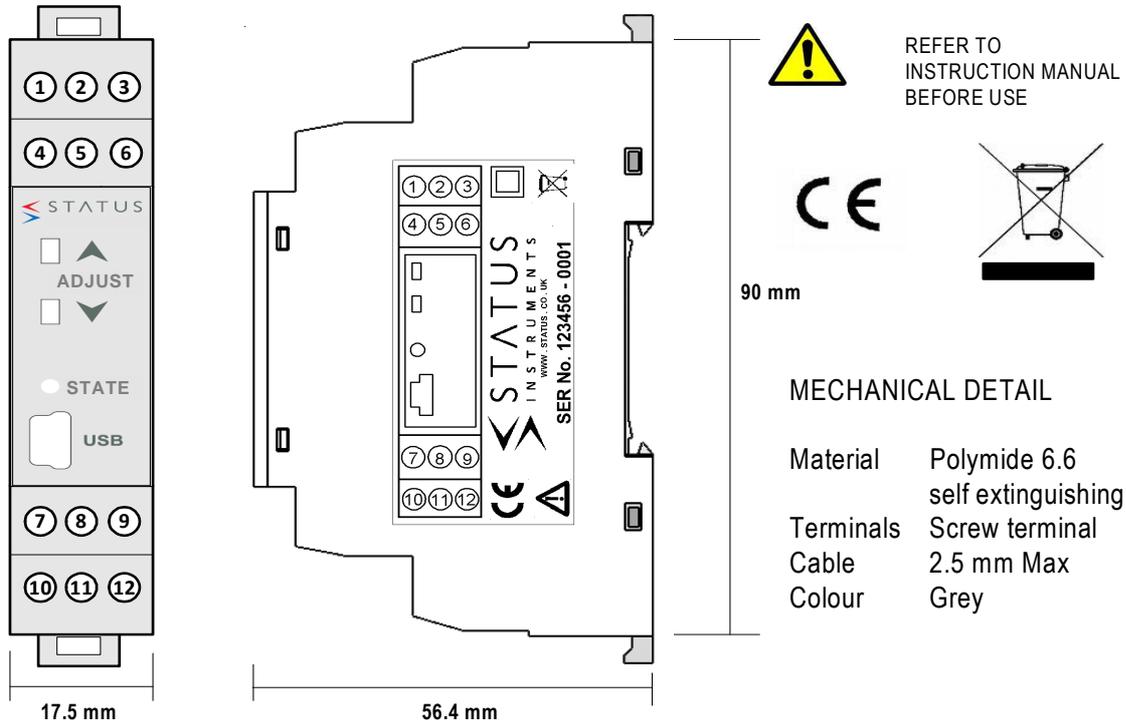

ORDER CODE	KOS1605TC
-------------------	------------------

ACCESSORIES	
USB configuration software	USBSpeedLink free of charge from www.ditel.es
Probe options	Refer to www.ditel.es

To maintain full accuracy annual calibration is required contact support@ditel.es for details
 The data in this document is subject to change. DISEÑOS Y TECNOLOGIA assumes no responsibility for errors

DISEÑOS Y TECNOLOGIA S.A.
 Xarol, 6B P.I. Les Guixeres
 08915 Badalona - ESPAÑA
 Tel.: +34933 394 758, fax +34 934 903 145
www.ditel.es

DITEL TEC S.A.S.
 45 rue Victor Hugo
 F-69220 Belleville – FRANCE
 Tel.: +33 474 65 41 49 fax +33 971 70 41 68
 Directe Badalona : 09 75 51 51 26

